

Troubleshooting (Ignition indicator)

Symptom	Possible cause	Workaround
The LED does not light.	There is a fault in the engine electrical system.	Have the engine repaired.
	The ignition pulse is not being received.	Use at a distance of up to 15 cm from the spark plug cables.
	Out of battery.	Please buy a new one as the battery cannot be replaced.
	The stop switch position of the engine is OFF (STOP).	Set the stop switch position of the engine to ON (START).
	Malfunction	Please contact the store where you purchased the product to request repairs.